


Installation guide

Load cell connection

Connect the load cell wires as shown below.

Loadcell 1 wire color	Connector
+EXC = Red	Top row, IN1+
+SIG = Green	Bottom row, OUT1+
-EXC = Black	Top row, IN1-
-SIG = White	Bottom row, OUT1-

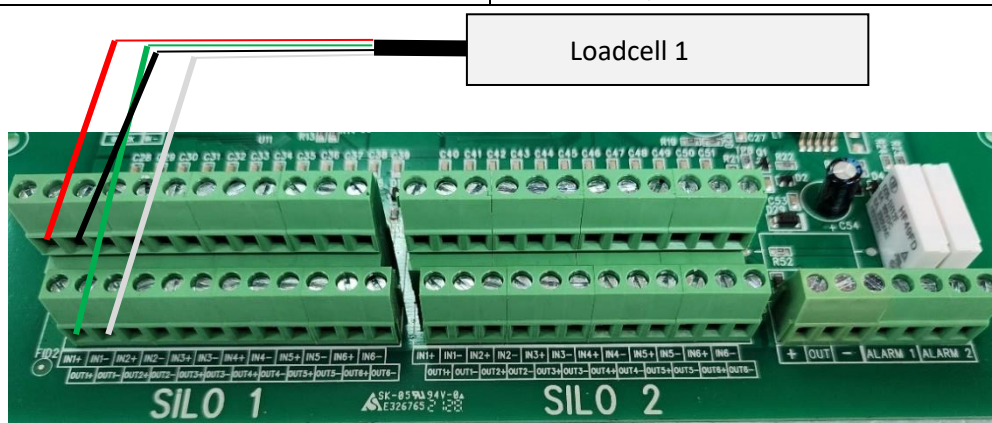

*Connect all loadcells in the same order using the corresponding connectors.

If the feed silo has more than 6 loadcells, loadcells can be connected parallelly.

Maximum loadcells: 16

Use the below table to connect the SW365 A/D card to an Agrologic climate controller.

Applies only to the Vision 24S, Imagell, Imagelll and Image Pro.



A/D Connection	Image Connection	Vision 24S connection
+	V+	V+
OUT	Digital input 20	Digital input 10
-	0	0

After silo calibration is done at the SW365 unit, enter in the main climate controller silo screens:

Zero Data: 500

Loadcell constant: 1878